



STEP 1

SELECT YOUR COLOR CODED COVER


To avoid misapplication, designate your Precision Delivery System to Doxem Precise (grey cover) or Taurus Dry (red cover). Swap covers by removing the screw above the on/off switch.



STEP 2

LOAD DRY FLOWABLE CARTRIDGE

Remove cartridge from packaging and unscrew the lid. Firmly screw the cartridge into the underside of the PDS. Do not over tighten. Be sure to keep cartridge upright to prevent spillage.

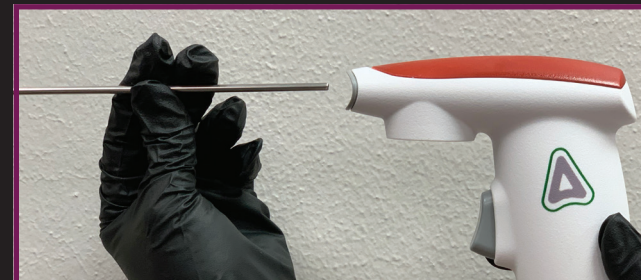

STEP 3

ATTACH APPLICATOR STRAW

Insert the appropriate precision applicator into the opening on front of the PDS.



STEP 4

TURN ON THE PDS

Move the switch located on the back of the PDS to the "ON" position.



STEP 5

BEGIN DISPENSING DRY FLOWABLE

Begin application into labeled areas by pressing the trigger for the appropriate amount of time. The trigger can be held down to dispense a continuous flow into a large void if necessary.



STEP 6

MONITOR YOUR APPLICATION RATE

Check the label of the dry flowable product for use rate information. The PDS controls the amount of product applied based on the amount of time the trigger is pressed.



STEP 7

REPLACEMENT OF EMPTY CARTRIDGES

To replace an empty cartridge, simply unscrew the used cartridge and replace **ONLY** with CSI dry flowable cartridges.



STEP 8

DISCARD EMPTY CARTRIDGES

Discard each empty cartridge after use. Cartridges are not reusable. Do **NOT** refill with any products or use any products except CSI dry flowable cartridges in the PDS.



STEP 9

PROPER STORAGE FOR FUTURE USE

When application is complete, remove the cartridge from the PDS and store cartridge in the original box or in the pocket of the holster.

THE PDS IS INTENDED FOR USE WITH CSI DRY FLOWABLES ONLY.